

WA15 Wind Set

| Wind Set | | WA15 | | PRICE | | | | | | | | | | | | | | | |
|---|---|----------|-------------|----------|--|-------------|----------|----------|----------|---------|--|------|--------------------------|------|--------------------------|---------|--|---------|---|
| Sensors | no sensors | | A | | | | | | | | | | | | | | | | |
| | Wind speed sensor WAA151 only | | B | | | | | | | | | | | | | | | | |
| | Wind direction sensor WAV151 only | | C | | | | | | | | | | | | | | | | |
| | Wind speed and direction sensors WAA151 and WAV151 | | D | | | | | | | | | | | | | | | | |
| Accessories | no crossarm or wind transmitter | | 1 | | | | | | | | | | | | | | | | |
| | Crossarm or transmitter and cable | | 2 | | | | | | | | | | | | | | | | |
| | Crossarm with termination box WAC151 | | 3 | | | | | | | | | | | | | | | | |
| | Crossarm with termination box WAC151, 16-lead signal cable | | 4 | | | | | | | | | | | | | | | | |
| | Crossarm with termination box WAC151, 6-lead power cable | | 5 | | | | | | | | | | | | | | | | |
| | Crossarm with termination box WAC151, 16-lead signal and 6-lead power cable | | 6 | | | | | | | | | | | | | | | | |
| | Crossarm and analog transmitter WAT12 | | 7 | | | | | | | | | | | | | | | | |
| | Crossarm and analog transmitter WAT12, 6-lead cable for signal and power | | 8 | | | | | | | | | | | | | | | | |
| | Crossarm and serial RS-485 transmitter WAC155 | | 9 | | | | | | | | | | | | | | | | |
| Power supply | no power supply | | A | | | | | | | | | | | | | | | | |
| | Power supply WHP151 | | B | | | | | | | | | | | | | | | | |
| | | | TOTAL | | | | | | | | | | | | | | | | |
| | | | QTY | | | | | | | | | | | | | | | | |
| | | | TOTAL VALUE | | | | | | | | | | | | | | | | |
| <p>Selections in bold are included in the prices of the basic versions.</p> <p style="text-align: center;">Example of order code with typical settings:</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td style="width: 100px;"></td> <td style="width: 50px;">WA15</td> <td style="width: 20px;">D</td> <td style="width: 20px;">5</td> <td style="width: 20px;">B</td> </tr> </table> <p>Accessories and Spare Parts:</p> <table style="width: 100%;"> <tr> <td style="width: 150px;">16923WA</td> <td>Thermostat Switch Option (not included in WAT12 if ordered separately)</td> </tr> <tr> <td>1394</td> <td>Connector WAA151, WAA252</td> </tr> <tr> <td>1395</td> <td>Connector WAV151, WAV252</td> </tr> <tr> <td>ZZ45048</td> <td>Outdoor Signal Cable for WA-sensors, 10m (16-lead)</td> </tr> <tr> <td>ZZ45049</td> <td>Outdoor Heating Power Cable, 10m (6-lead)</td> </tr> </table> | | | | | | WA15 | D | 5 | B | 16923WA | Thermostat Switch Option (not included in WAT12 if ordered separately) | 1394 | Connector WAA151, WAA252 | 1395 | Connector WAV151, WAV252 | ZZ45048 | Outdoor Signal Cable for WA-sensors, 10m (16-lead) | ZZ45049 | Outdoor Heating Power Cable, 10m (6-lead) |
| | WA15 | D | 5 | B | | | | | | | | | | | | | | | |
| 16923WA | Thermostat Switch Option (not included in WAT12 if ordered separately) | | | | | | | | | | | | | | | | | | |
| 1394 | Connector WAA151, WAA252 | | | | | | | | | | | | | | | | | | |
| 1395 | Connector WAV151, WAV252 | | | | | | | | | | | | | | | | | | |
| ZZ45048 | Outdoor Signal Cable for WA-sensors, 10m (16-lead) | | | | | | | | | | | | | | | | | | |
| ZZ45049 | Outdoor Heating Power Cable, 10m (6-lead) | | | | | | | | | | | | | | | | | | |

